

How to Install Plastic Landscape Edging

Created by: www.BlazingStarGardens.com


Visit our online store to purchase native pollinator plants!

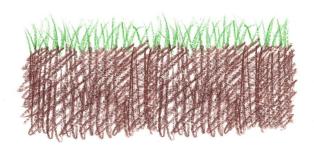

Tip: Before starting, unroll your edging flat on a driveway to warm up and straighten out! Put weights on it to hold it down.

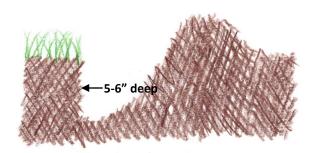


Spray paint or use a rope to mark your garden edge. Dig straight down about 6" and put the soil into the garden.

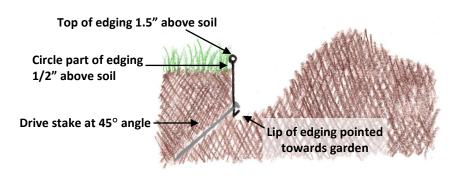

Buy 8-10in galvanized stakes from hardware section. Using rubber mallet, put a stake *every 4-5ft*. Edging should be about 1.5in above soil level—low enough so mower doesn't hit, but high enough that it doesn't get buried by grass buildup. If you don't use enough stakes, your edging will lift out of soil after a year or two!


Tip: To connect edging together, first cut off 4" of the circle top part on each end, so that when you connect the circle parts, the flat part of the edging overlaps!

Push soil back into trench. Leave 3in of space on garden side for mulch. Pack soil down well! Walking on it helps.

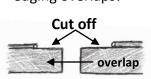

Add paper or cardboard (optional). Put 3in of wood mulch on top.

Tip: Soften the circle edging with a lighter to make the "connector" fit in easier

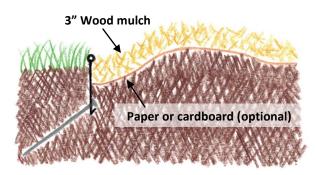

Pack down well

Tip: You can buy 3ft x 140ft rolls of paper from the paint section of home improvement stores

www.BlazingStarGardens.com